



Setting up a Slate and PL Mic on the O1V using Mute Groups


- 1) Connect your external Slate Microphone to Input 12 (AD12) on the O1V.
- 2) Press the PATCH button on the console, and go to the "IN PATCH" tab. Assign AD12 to Inputs 31 and 32

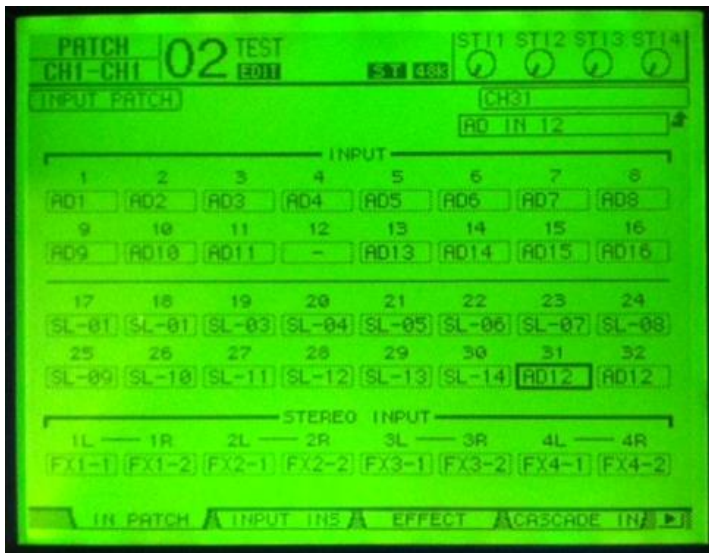


- 3) Press the PAIR/GROUP button on the panel and go to the "IN MUTE" tab. Assign CH31 to Input Mute Group "I" and CH32 to Input Mute Group "J". Make sure to check the "Input Mute Master" box at the top of the screen, and to enable the two mute groups by moving the cursor to the "MUTE" box to the right of each group name and pressing Enter.

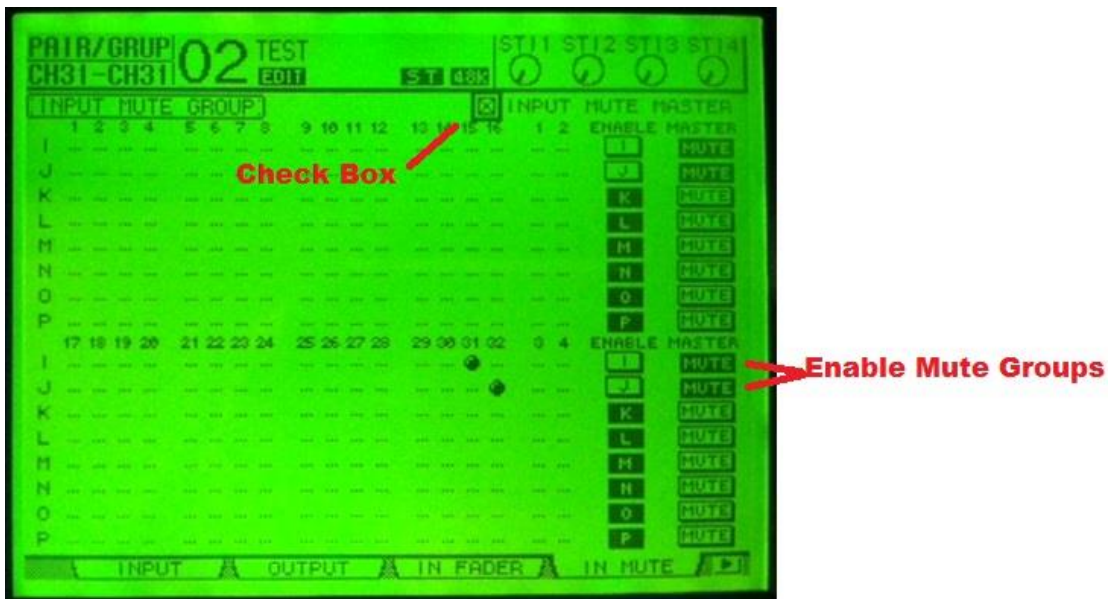


- 4) Press the UTILITY button on the panel, and go to the “USER DEF” tab. Assign #7 to “IN Mute Group I”, and #8 to “IN Mute Group J”

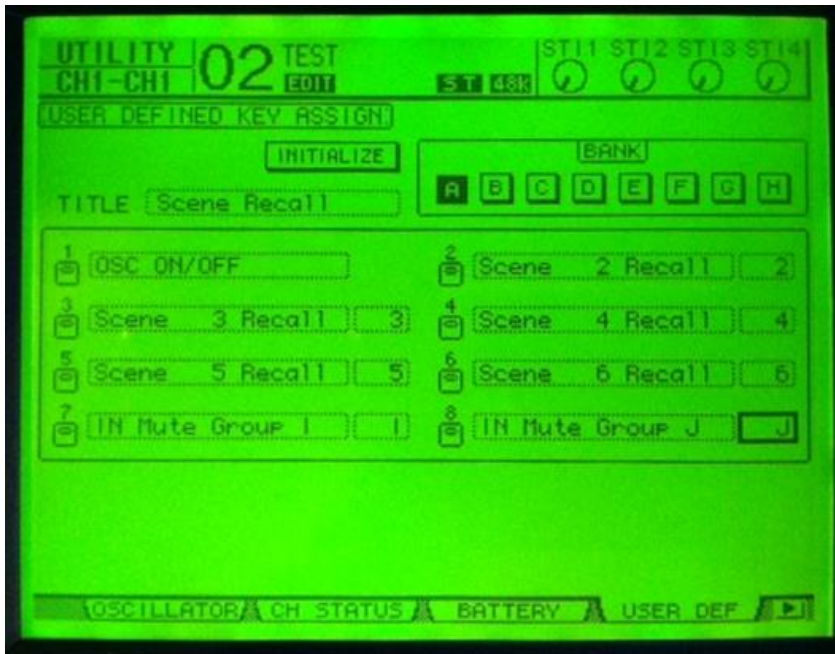

- 5) Press the “PAN/ROUTE” button, and go to the “ROUTE1-16” tab. Assign all inputs to the Stereo Buss, and to Buss 1 (If you will be using channels 17-30 for audio, then do the same for those inputs)

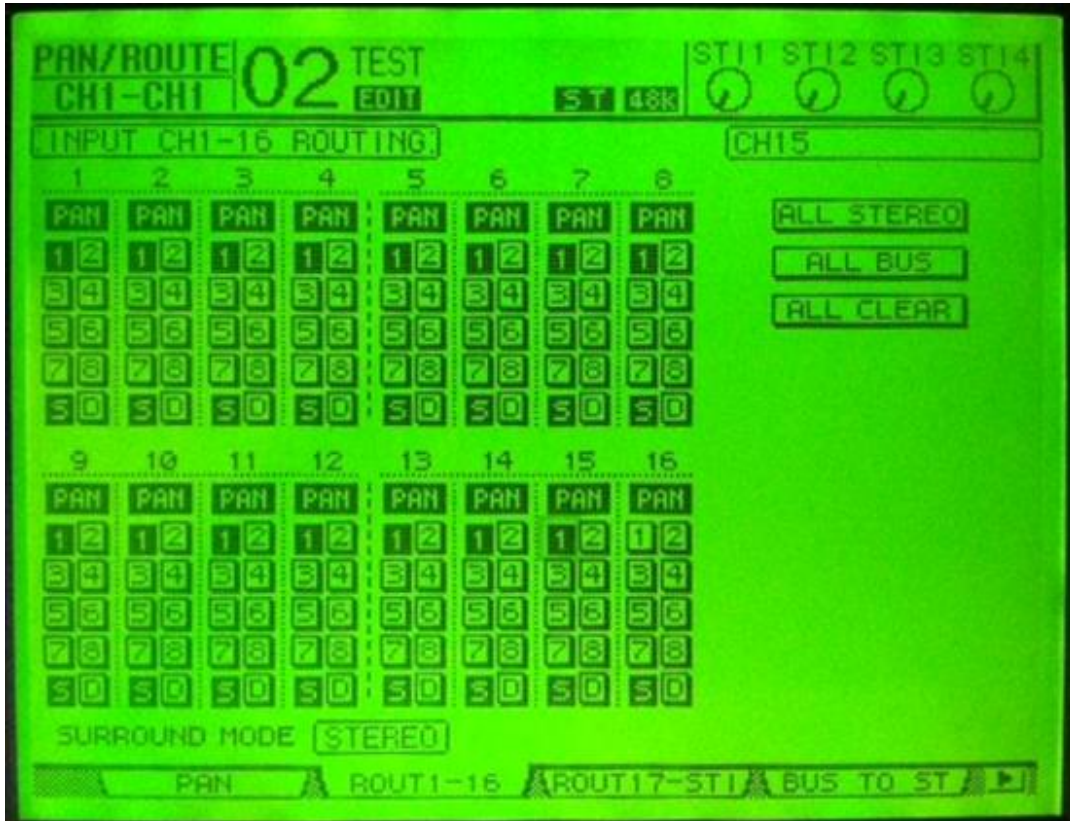

- 6) In the PAN/ROUTE menu, go to the "ROUTE17-ST1" tab. Assign CH32 to the Stereo Buss ONLY and CH32 to BUSS1 ONLY

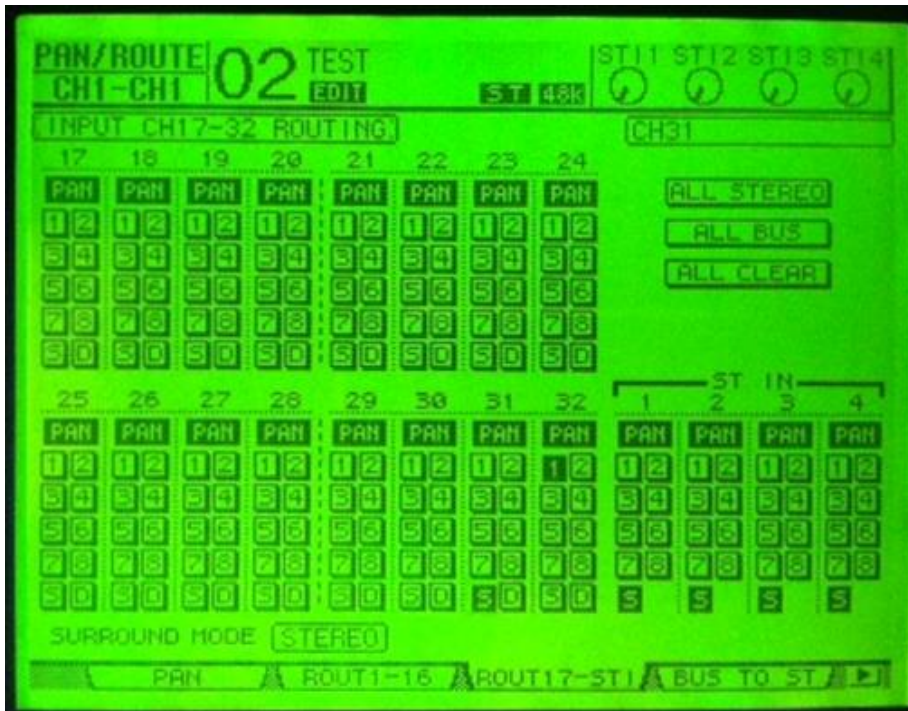

- 7) In the PATCH menu, go to the OUTPUT PATCH tab, and assign BUSS 1 to OMNI OUT 1